

S-MATE2

 


Interrupor eWeLink-Remote

Manual de usuario V1.0

Introducción

El S-MATE2 es un interruptor alimentado por batería que se puede utilizar para conectar interruptores basculantes o pulsadores comunes sin necesidad de una línea neutra. Se puede utilizar como subdispositivo eWeLink-Remote y agregarlo a la puerta de enlace eWeLink-Remote para control local. Además, puede lograr la vinculación de dispositivos inteligentes mediante la configuración de escenas inteligentes.

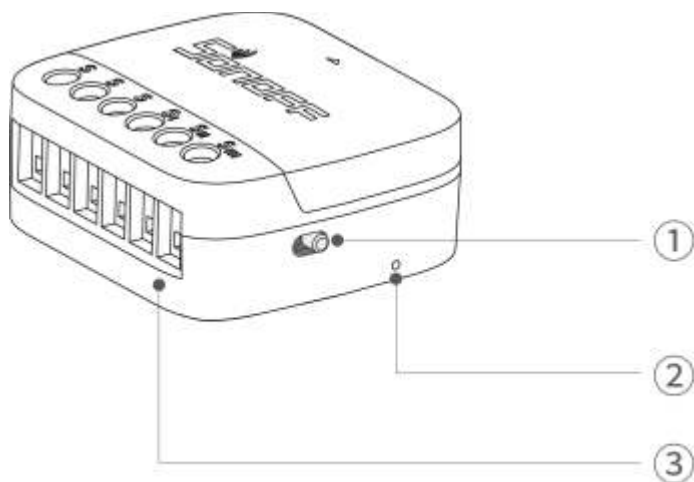

① Interruptor DIP

② Indicador Led

- Parpadea una vez rápidamente: el estado del interruptor externo cambia
- Parpadea 3 veces rápidamente: el tipo de interruptor externo se cambió con éxito
- Parpadea 3 veces rápidamente: el estado del interruptor externo cambia y el dispositivo tiene poca batería

③ Puertos de cableado

Interruptor DIP

El modo predeterminado de fábrica de este dispositivo es el modo de interruptor basculante (Figura ①). Si el dispositivo está conectado a un interruptor momentáneo, gire el interruptor DIP hacia la izquierda (Figura ②). El indicador LED parpadeará 3 veces rápidamente después de que se haya cambiado correctamente el modo de interruptor.

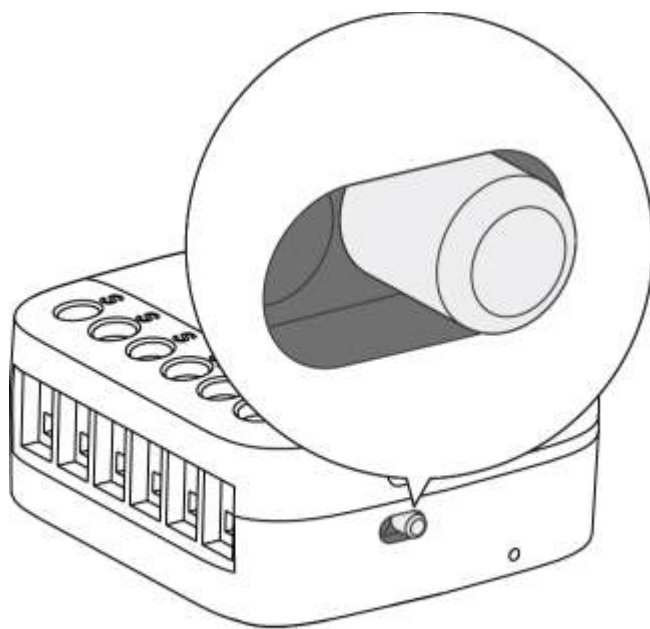 


Figura ①

Modo de interruptor basculante

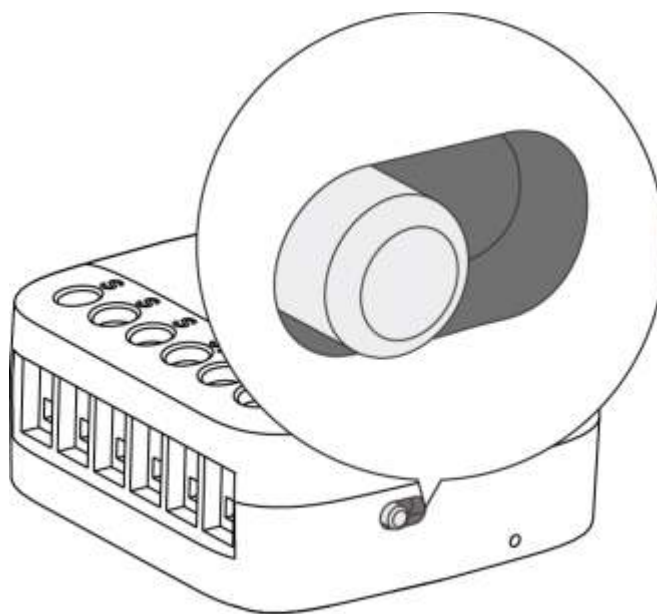 


Figura ②


Modo de interruptor momentáneo

Especificaciones


Modelo	S-MATE2
MCU	Ak803
Entrada	3.0V ===
Conectividad inalámbrica	2.4G
Modelo de batería	Cr2477
Peso neto	26.8g
Dimensiones	40.3x37.4x18.3mm
Color	Blanco
Material de la carcasa	ABS
Lugar de aplicación	Interior
Temperatura de trabajo	-10°C~40°C
Humedad de trabajo	5%~95% (Humedad Relativa), sin condensación
Certificados	CE/FCC/ISED/RoHS

Instalación

 1. Retire la lámina aislante de la batería.

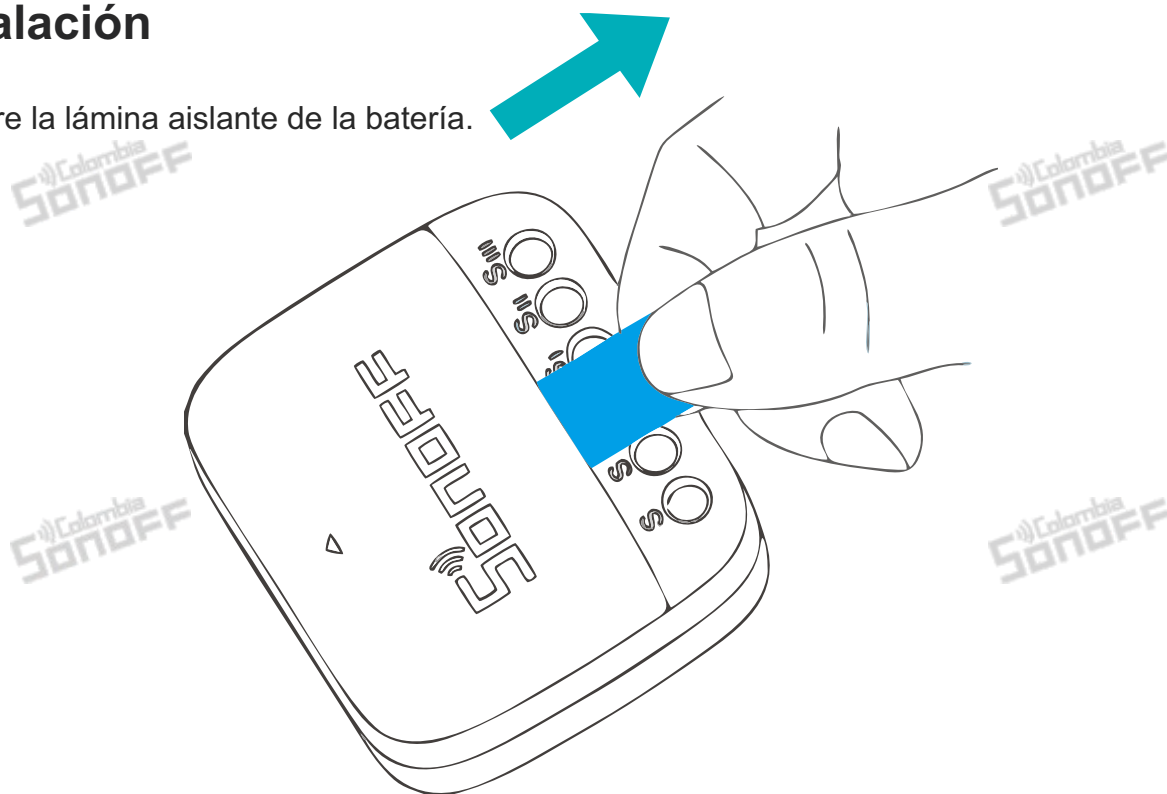


 2. Desenergizar

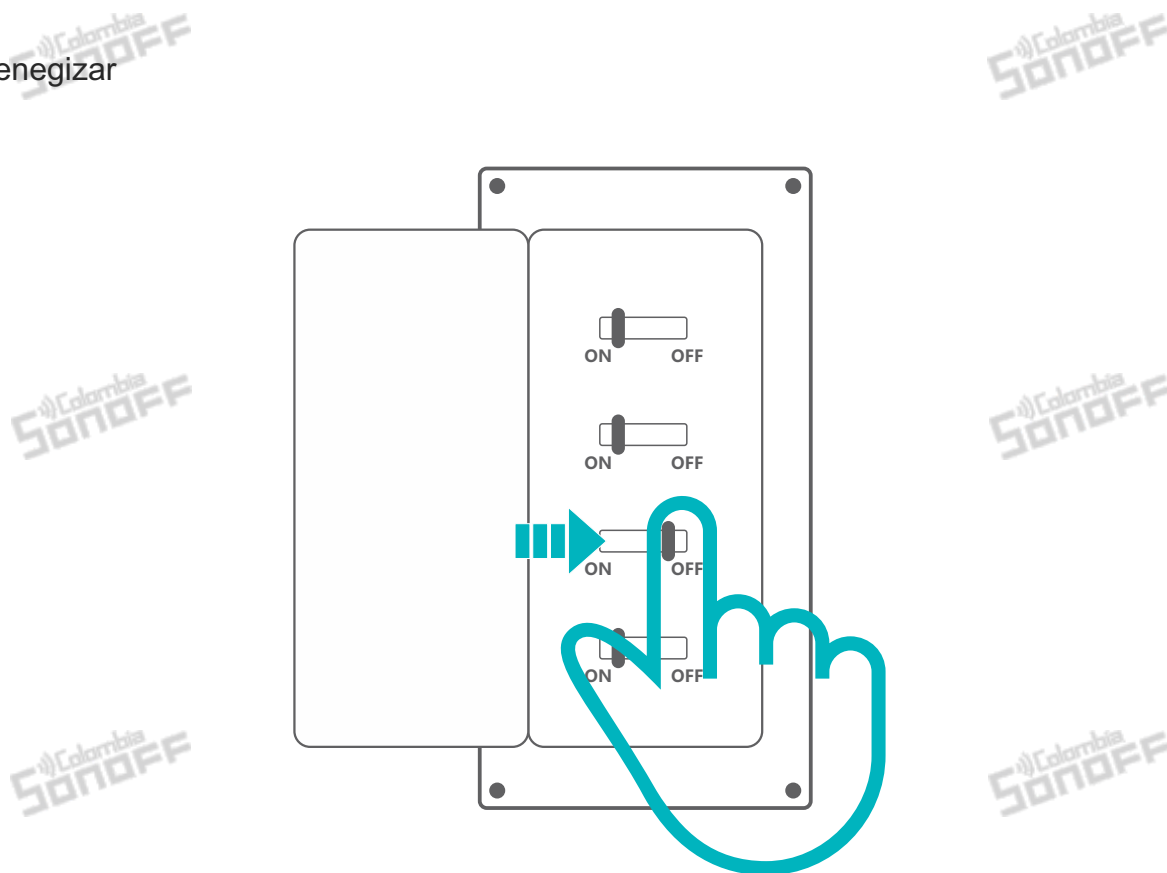

*La instalación y el mantenimiento del dispositivo deben ser realizados por un electricista profesional. Para evitar el riesgo de descarga eléctrica, no utilice ninguna conexión ni toque el conector de terminal mientras el dispositivo esté encendido.

 3. Instrucciones de cableado

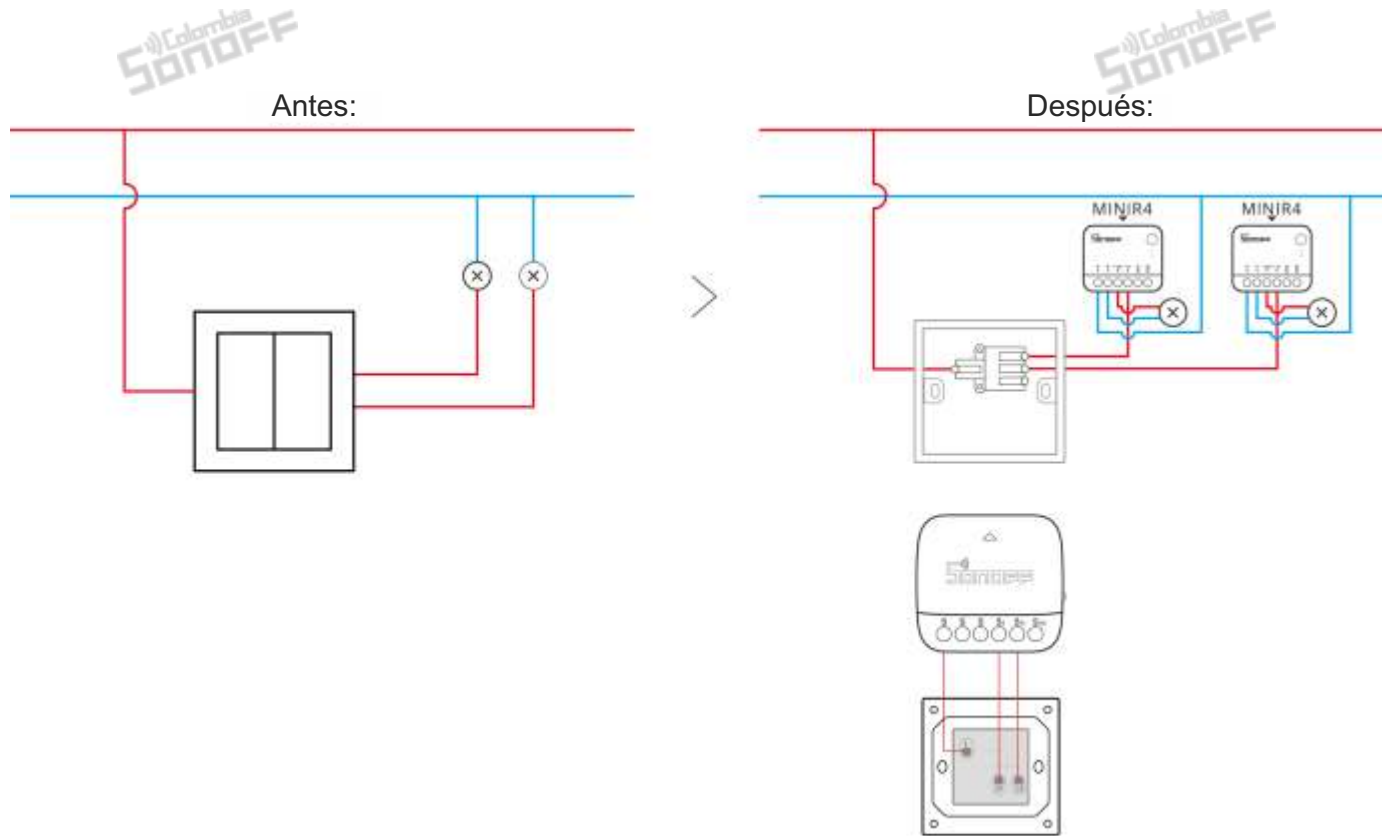

* El S-MATE2 necesita funcionar con una puerta de enlace eWelink-Remote. (Aquí el MINIR4 actúa como puerta de enlace eWelink-Remote).

Agregar dispositivo



Haga clic en "..." en la página de inicio de la puerta de enlace eWeLink-Remote



 
Haga clic en "Subdispositivos eWeLink-Remote" en la configuración del dispositivo



Haga clic en el botón "Añadir" y la puerta de enlace eWeLink-Remote ingresará al modo de aprendizaje



Haga clic en un botón del subdispositivo dentro de 10 segundos

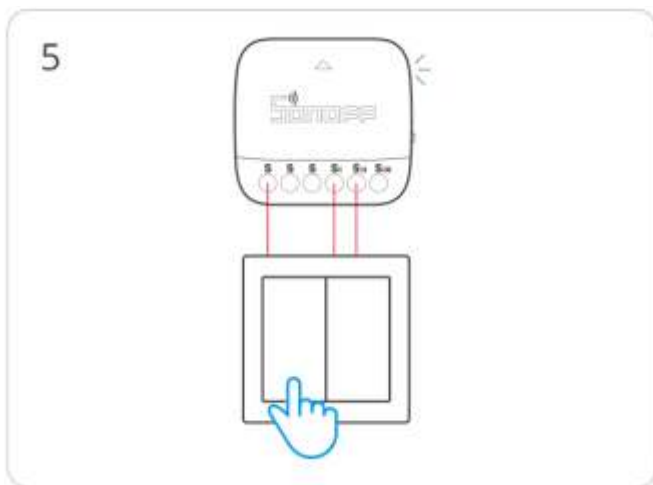

Haga clic en el botón del subdispositivo para agregar el dispositivo

Escenas inteligentes

El subdispositivo eWeLink-Remote solo se puede utilizar como dispositivo de activación y no como dispositivo de ejecución.



Seleccione "+" en la página de escena para agregar una nueva escena



Seleccione "Agregar" activadores



Seleccione "Dispositivo inteligente"



Seleccione "S-MATE2" y siga los pasos para configurar las condiciones



Agregar el dispositivo vinculado



Completar la configuración de la escena

Puertas de enlace eWeLink-Remote compatibles



<https://sonoff.tech/product-review/product-insight/what-is-ewelink-remote-control/>

Este dispositivo se conecta a un interruptor normal y se utiliza junto con un producto que ofrece la función de puerta de enlace eWeLink-Remote. Haga clic en la imagen o ingrese la dirección del sitio web para ver los productos compatibles.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2.Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with

the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED Notice

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with RSS-247 of Industry Canada.

Operation is subject to the condition that this device does not cause harmful interference.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio

exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) L'appareil ne doit pas produire de brouillage;

(2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet appareil numérique de la Classe B conforme à la norme NMB-003 du Canada.

Cet appareil est conforme à la norme RSS-247 d'Industrie Canada. Le fonctionnement est soumis à la condition que cet appareil ne provoque pas d'interférences nuisibles.

ISED Radiation Exposure Statement

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux rayonnements de la ISED établies pour un environnement non contrôlé.

Cet équipement doit être installé et fonctionner à au moins 20cm de distance d'un radiateur ou de votre corps.

Cet émetteur ne doit pas être co-localisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

SAR Warning

Under normal use of condition, this equipment should be kept a separation distance of at least 20cm between the antenna and the body of the user.

Dans des conditions normales d'utilisation, cet équipement doit être maintenu à une distance d'au moins 20 cm entre l'antenne et le corps de l'utilisateur.

WEEE Warning



WEEE Disposal and Recycling Information All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

EU Declaration of Conformity

Hereby, Shenzhen Sonoff Technologies Co., Ltd. declares that the radio equipment type S-MATE2 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://sonoff.tech/usermanuals>



Do not ingest battery, Chemical Burn Hazard.

This product contains a coin/button cell battery.

If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Scatola	Manuale
PAP 21	PAP 22
Carta	Carta
RACCOLTA DIFFERENZIATA	
Verifica le disposizioni del tuo Comune. Separa le componenti e conferiscile in modo corretto.	

For CE Frequency:

Operation Frequency:2426MHz

RF Output Power:≤10dBm



Shenzhen Sonoff Technologies Co., Ltd.

3F & 6F, Bldg A, No. 663, Bulong Rd, Shenzhen, Guangdong, China

ZIP code: 518000

Website: sonoff.tech

Service email: support@itead.cc

